


RETRACTABLE SCREEN (MAIN COMPONENTS)

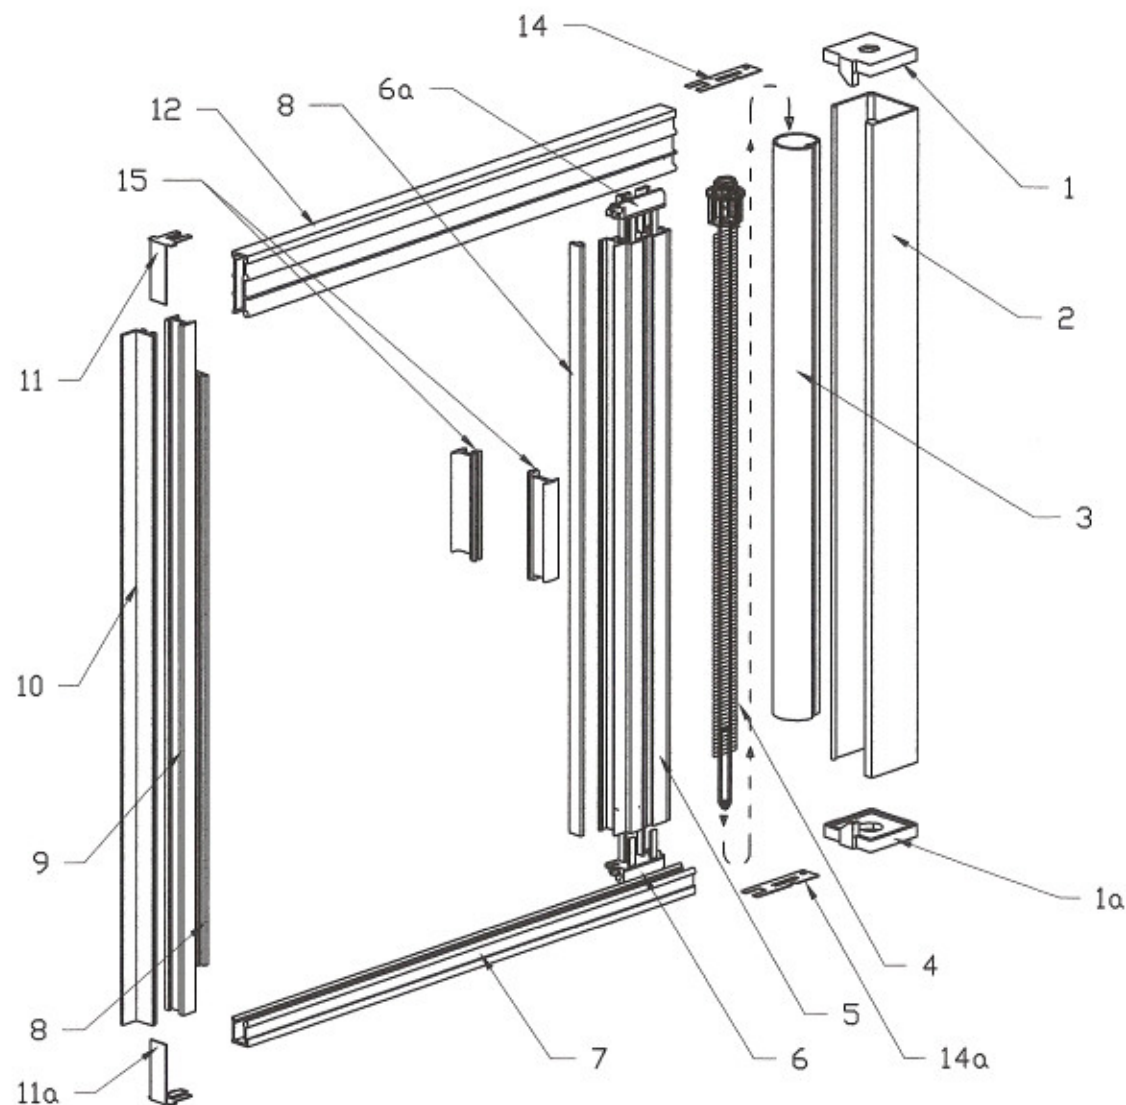

1.- COVER END CAP
(TOP/BOTTOM)

2.- COVER

3.- TUBE

4.- SPRING ASSEMBLY

5.- PULL RAIL

6.- PULL RAIL END CAP
(TOP/BOTTOM)

7.- BOTTOM RAIL

8.- MAGNET

9.- JAMB

10.- JAMB SUPPORT

11.- JAMB CLIP

12.- TOP RAIL



13.- SCREEN (OMITTED FOR CLARITY)

14.- HOUSING COVER CLIPS
(TOP & BOTTOM)

15.- HANDLE



RETRACTABLE SCREEN

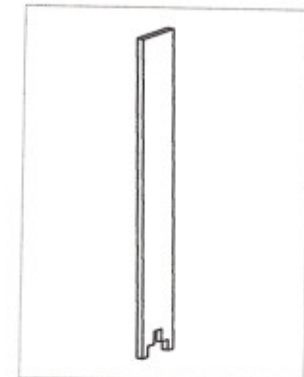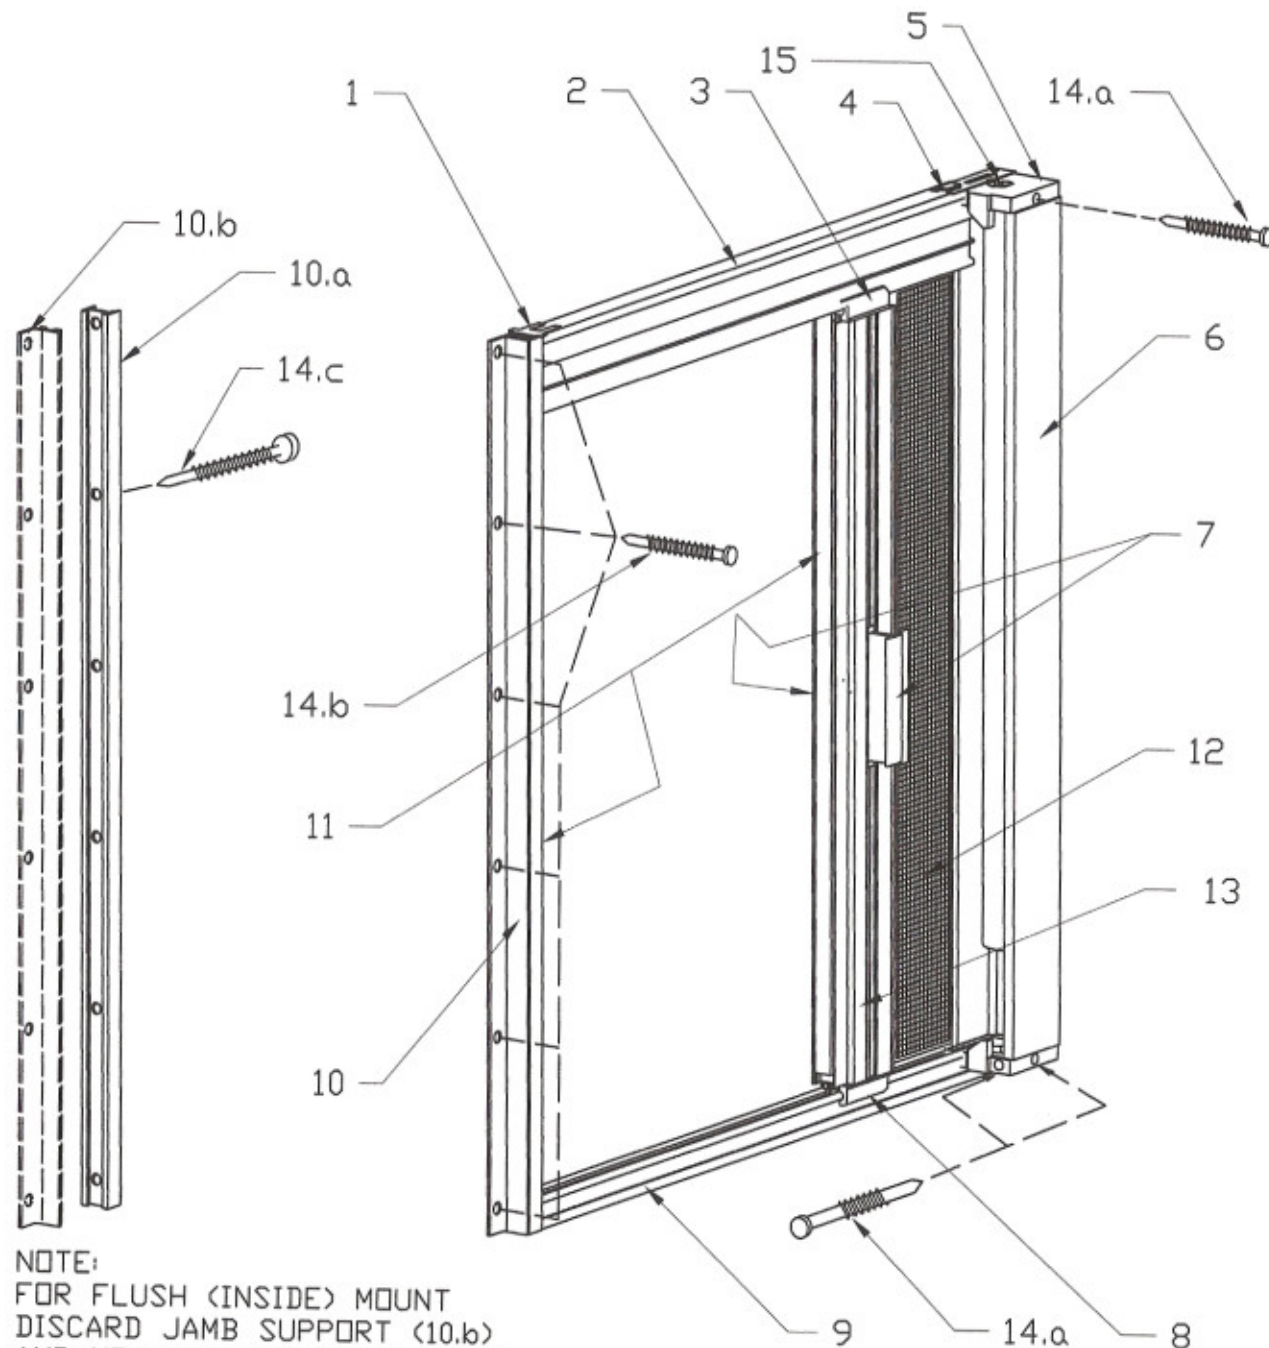

ADJUSTING WRENCH

- 1.- JAMB CLIP
- 2.- TOP RAIL
- 3.- PULL RAIL
- 4.- HOUSING COVER CLIPS
(TOP & BOTTOM)
- 5.- COVER END CAP
(TOP & BOTTOM)
- 6.- COVER
- 7.- HANDLES
- 8.- PULL RAIL
END CAP (BOTTOM)
- 9.- BOTTOM RAIL
- 10.- JAMB / JAMB SUPPORT
- 11.- MAGNETS
- 12.- SCREEN
- 13.- PULL RAIL
- 14.- FASTENERS
 - a.- #8x2 1/2" PAN HD.
 - b.- #6 x3/4 TRUSS HD.
 - c.- #6x3/4 FLT HD.
- 15.- TENSIONER SPRING
ADJUSTER

NOTE:
FOR FLUSH (INSIDE) MOUNT
DISCARD JAMB SUPPORT (10.b)
AND UTILIZE FASTENERS (14.c)
AS INDICATED

