



## Stop Pin installation instructions for Dreamscreen double doors


Tools Required:

- #1 (small) Phillips head screwdriver
- #2 (medium) Phillips head screwdriver
- small flat head screwdriver


Step 1) Thread the two white nylon screws into the holes of the long stop pins as shown.



Step 2) Remove the pan-head screw from the center of the deep grooved end cap. Remove the small screw on the screen side of the end cap (it holds the spline)

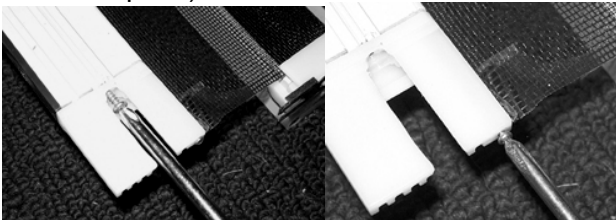

Step 3) Pull the plastic end cap straight out. On some older models, you may have to loosen the flat head screw through the magnet face near the cap

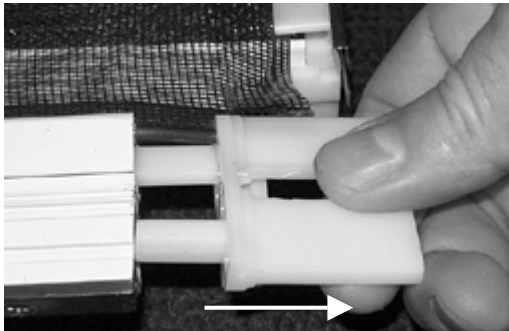


Step 4) Loosen the set screw on the Dreamscreen handle on the side of the door you are installing the stop pins and slide the handle out.

Step 5) Slide the first stop pin into the pull rail groove that the handle just slid out of, with the nylon screw end last. Then slide the handle back in, followed by the second stop pin (with the nylon screw first). Fig 5



Step 6) Carefully replace the plastic end cap, threading the spline on the screen mesh into the cap as shown. Replace the screws from step 2. Be certain that the pan-head screw in the cap is backed off 1/2 turn after tightening. The cap must "float" in position.

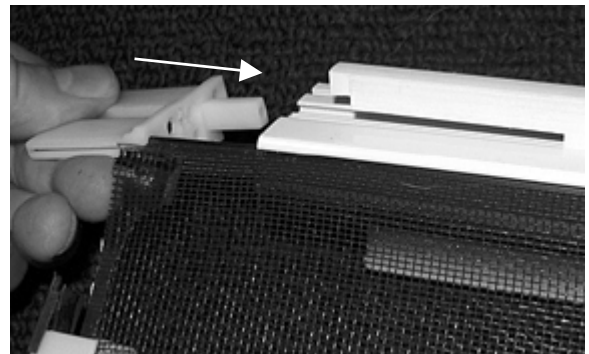

Once the Dreamscreen doors have been installed, mounted the keepers (included in the stop pin parts bag) to the top and bottom of the door frame.

*The Worlds Finest Retractable Screen*

2033 Princeton St. • Sarasota, FL 34237 • (941) 953-4529 • Fax (941) 953-2454

Email [info@dreamscreens.com](mailto:info@dreamscreens.com) • <http://www.dreamscreens.com>