



dreamscreens

# Installing a single Dreamscreen




Set unit in place  
and attach with  
2 ½ " screw.

Do not tighten the  
screw yet,  
tighten just  
enough to keep  
from falling.



Insert **silver** track clip into the jamb. It fits between the magnet and the jamb.  
Put one at each end.

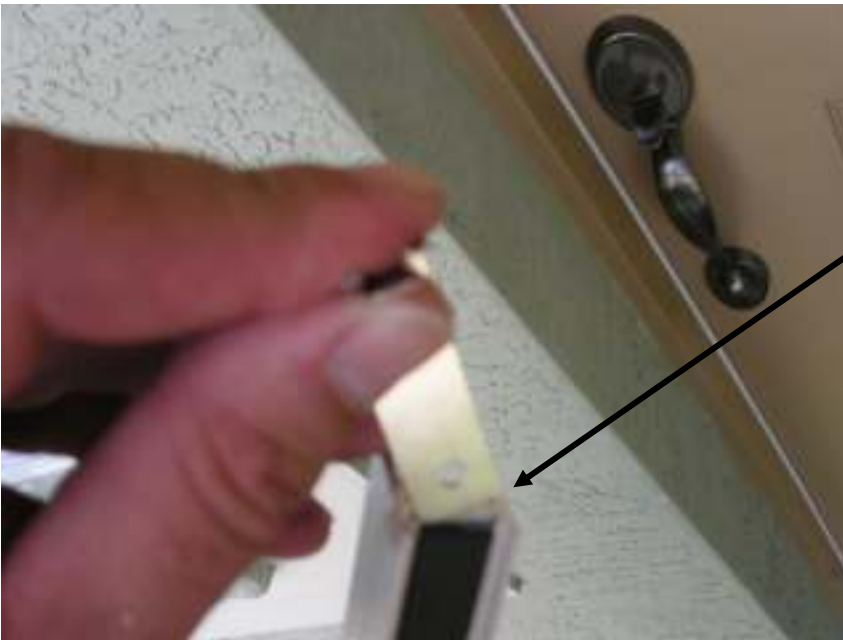



**Stand the jamb upright on opposite side, attach with one screw.**



• There are 5 screw holes in the jamb.  
Put a screw in the middle hole only to start. This way if you have to move the jamb, you only have to patch one hole.

# Measure from the housing to the jamb



Make sure the measurement is the same top and bottom

Add 1/8" to this measurement



Magnet is recessed 1/8"





# Prepare your tracks

Notice the stickers



# Prepare your tracks

Notice the stickers



Line up the 'do not cut' ends



# Measure and Mark





# Make the cut



Cut both tracks together to make them the same size

Slide top track through end cap



Through the cap, onto the clip



# Snug against housing





# Fit onto clip on the jamb side



You may need to remove that single screw for this.

Make sure track reaches magnet



# Repeat on the bottom



# Flush to the housing





Fit jamb side same as the top  
make sure track reaches magnet



Make sure unit is square!  
Make adjustment if necessary



Once it's squared, tighten bottom and top screw.

# Add screws to the jamb



# Lubricate the tracks

simply spray where the plastic meets the metal



Use pure clear silicone spray.....**never use WD-40**



Cycle the door once or twice



- That's it! You have installed a  
Dreamscreen!